

Portable IC Audio Player

Network Walkman NW-E103/E105/E107


Operating Instructions

Quick Start Guide



Refer to the PDF file “Operating Instructions”

Refer to the PDF file “Operating Instructions” for more information and for troubleshooting.

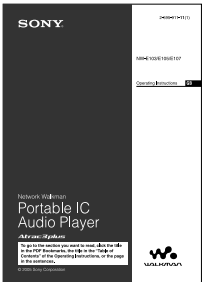


How to display the PDF file “Operating Instructions”
The PDF file “Operating Instructions” will be installed when the SonicStage software is installed. Double-click  (“NW-E100 series manuals”), or click [Start] - [All Programs] - [SonicStage] on your computer.

You need Adobe Acrobat Reader 5.0 or later, or Adobe Reader software in your computer.

For other languages PDF file “Operating Instructions”
English PDF file “Operating Instructions” are contained in the supplied CD-ROM.
O ficheiro PDF “Instruções de funcionamento” em português está no CD-ROM fornecido.
Nederlands PDF-bestand “Gebruiksaanwijzing” vindt u op de bijgeleverde CD-ROM.
Den svenska PDF-filen “Bruksanvisning” finns på den medföljande CD-ROM-skivan.
Suomenkielinen PDF-tiedosto “Käyttöohje” on toimitetulla CD-levyllä.
Файл “Инструкция по эксплуатации” в формате PDF на русском языке содержится на прилагаемом диске CD-ROM.

Enjoying music with the Network Walkman

You can easily transfer digital audio files from your computer to your Network Walkman using the SonicStage software to enjoy music anywhere you go.

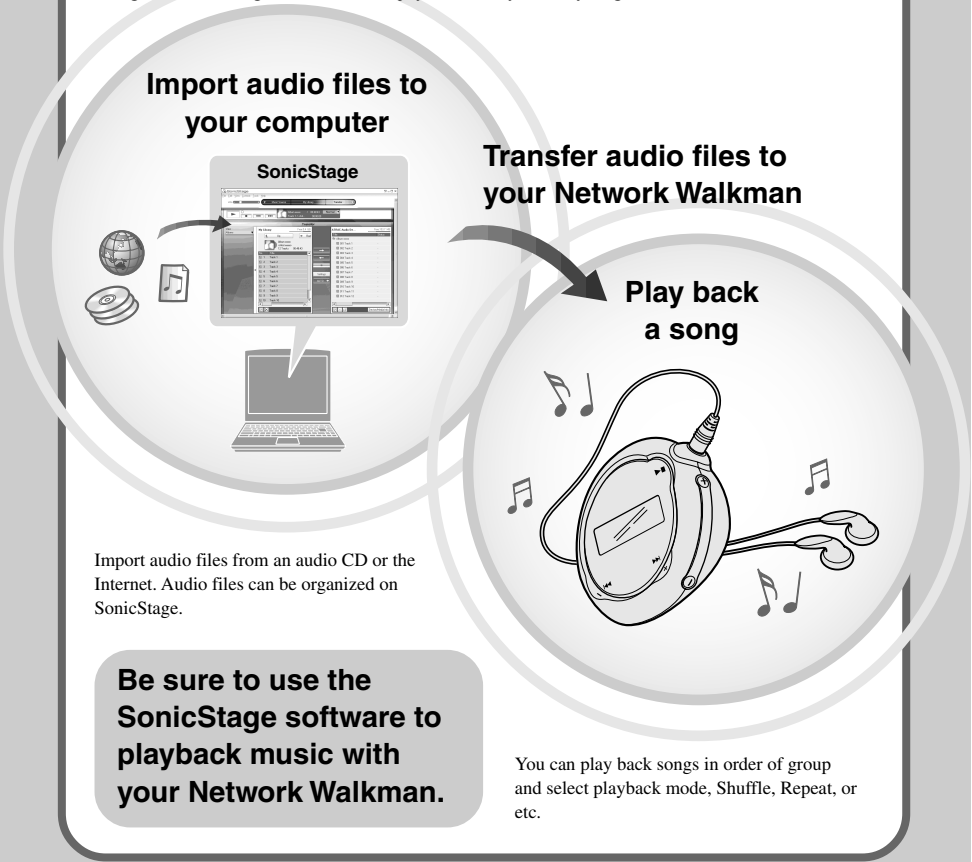

Import audio files from an audio CD or the Internet. Audio files can be organized on SonicStage.

Be sure to use the SonicStage software to playback music with your Network Walkman.

You can play back songs in order of group and select playback mode, Shuffle, Repeat, or etc.

Let’s use the unit →

Proceed with steps 1 to 6

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

To prevent fire, do not cover the ventilation of the apparatus with newspapers, table cloths, curtains, etc. And don’t place lighted candles on the apparatus. To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.

Note on installation

If you use the unit at a place subject to static or electrical noise, the track’s transferring information may be corrupted. This would prevent successful transferring authorization on your computer.

For the customers in the United States

Owner’s Record

The model number is located on the front and the serial number is located in the battery compartment of the player. Record the serial number in the space provided below. Refer to them whenever you call your Sony dealer regarding this product.

Model No. _____
Serial No. _____

INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

Declaration of Conformity	
Trade Name:	SONY
Model No.:	NW-E103 NW-E105 NW-E107
Responsible Party:	Sony Electronics Inc.
Address:	16450 W. Bernardo Dr. San Diego, CA 92127 USA
Telephone Number:	858-942-2230
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.	

For the customers in the Netherlands

Voor de Klanten in Nederland



Gooi de batterij niet weg maar lever deze in als klein chemisch afval (KCA).

Notice for users

On the supplied software

- Copyright laws prohibit reproducing the software or the manual accompanying it in whole or in part, or renting the software without the permission of the copyright holder.
- In no event will SONY be liable for any financial damage, or loss of profits, including claims made by third parties, arising out of the use of the software supplied with this player.
- In the event a problem occurs with this software as a result of defective manufacturing, SONY will replace it. However, SONY bears no other responsibility.
- The software provided with this player cannot be used with equipment other than that which is so designated.
- Please note that, due to continued efforts to improve quality, the software specifications may be changed without notice.
- Operation of this player with software other than that provided is not covered by the warranty.

Program ©2001, 2002, 2003, 2004, 2005 Sony Corporation
Documentation ©2005 Sony Corporation

“WALKMAN” is a registered trademark of Sony Corporation to represent Headphone Stereo products.  is a trademark of Sony Corporation.
PSYC is a trademark of Sony Corporation.
OpenMG and its logo are trademarks of Sony Corporation.
SonicStage and SonicStage logo are trademarks or registered trademarks of Sony Corporation.

ATRAC, ATRAC3, ATRAC3plus and their logos are trademarks of Sony Corporation.
Microsoft, Windows and Windows Media are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
US and foreign patents licensed from Dolby Laboratories.
All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders.
In this manual, TM and ® marks are not specified.
Adobe Reader is a trademark of Adobe Systems Incorporated.
CD and music-related data from Gracenote, Inc., copyright © 2000-2004 Gracenote. Gracenote CDDDB® Client Software, copyright 2000-2004 Gracenote. This product and service may practice one or more of the following U.S. Patents: #5,987,525; #6,061,680; #6,154,773, #6,161,132, #6,230,192, #6,230,207, #6,240,459, #6,330,593, and other patents issued or pending. Services supplied and/or device manufactured under license for following Open Globe, Inc. United States Patent 6,304,523. Gracenote is a registered trademarks of Gracenote. The Gracenote logo and logotype, and the “Powered by Gracenote” logo are trademarks of Gracenote.

On the Specifications

See the PDF file “Operating Instructions” for the Specifications.

For online customer support information

For customers in the USA and Canada, visit:
<http://www.sony.com/walkmansupport>

For customers in Europe, visit:
<http://www.support-nwwalkman.com>


For customers in the other country, visit:
<http://www.css.ap.sony.com>

<http://www.sony.net/>


Preparing

1 Checking the package contents

- Network Walkman (1)
Headphones (1)*

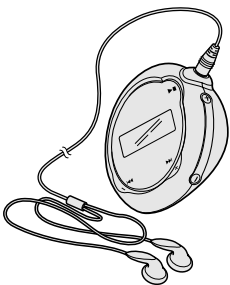

- Dedicated USB cable (1)

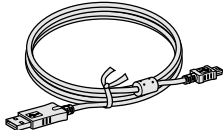


- CD-ROM for the SonicStage software, PDF file Operating Instructions and PDF file SonicStage Operating Instructions (1)
- Quick Start Guide

* On PSYC® Model, a different type headphone may be supplied.

2 Inserting the battery

Insert an LR03 (size AAA) alkaline battery with correct polarity.

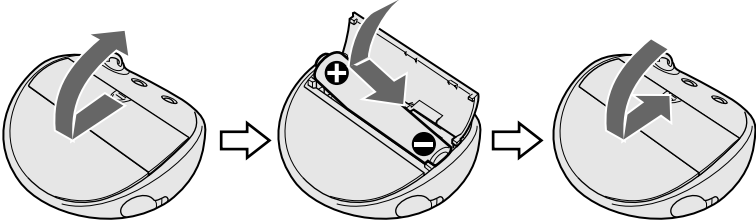

Remaining battery indication

The battery icon in the display changes as shown below.



If “LOW BATT” is displayed, you need to change the battery.

If installing is not successful — Q&A

Q1 Is there sufficient hard disk drive space on your computer?

- A1 200 MB or more space is needed to install the SonicStage software (1.5 GB or more is recommended). (The amount of space will vary depending on the Windows version and the number of audio files stored on the built-in flash memory.) If the hard disk drive space is insufficient, delete unnecessary data on your computer to increase space.

Q2 Is the operating system on your computer compatible?

- A2 The following operating systems are compatible with the SonicStage software. Operating systems other than the following are not supported.
Factory installed: Windows XP Media Center Edition 2005 / Windows XP Media Center Edition 2004 / Windows XP Media Center Edition / Windows XP Professional / Windows XP Home Edition / Windows 2000 Professional / Windows Millennium Edition / Windows 98 Second Edition

Notes

- This software is not supported by the following environments:
 - OSs other than those indicated above
 - Personally constructed PCs or operating systems
 - An environment that is an upgrade of the original manufacturer-installed operating system
 - Multi-boot environment
 - Multi-monitor environment
 - Macintosh
- For Windows 2000 Professional users, install Service Pack 3, or later version, before using the software.

Q3 Did all Windows programs on your computer quit before installation the SonicStage software?

- A3 Quit all activated applications (displayed on the task bar of your computer).

Q4 Does the installation appear to have stopped before it has finished?

- A4 Check for the appearance of an error message beneath the installation window. Press the “Tab” key while holding down the “Alt” key. If there is an error message, follow the instructions on the screen. If there is no message, the installation is still in progress. Wait for a little while longer.

Q5 Is the progress bar on the install wizard moving?


- A5 When the progress bar on the install wizard of your computer is moving, the installation is progressing normally. Please wait. The installation may take 30 minutes or more, depending on your computer, CD drive or system environment.

3 Installing the SonicStage software

Be sure to install the “SonicStage” software from the supplied CD-ROM in your computer. (The driver for the Network Walkman, the PDF file Operating Instructions and the PDF file SonicStage Operating Instructions will be installed.)

① Insert the supplied CD-ROM into your computer.

The install wizard will be displayed.

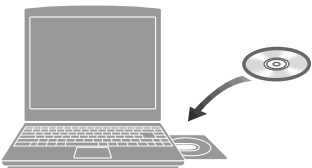


Notes

- Quit all activated applications on your computer.
- Log on as administrator (in case of Windows 2000 / Windows XP).
- Quit the virus check software (the software is hard-pressed on your computer).

② Click [Install SonicStage] and follow the instructions on the screen.

(When the Region Selection screen is displayed, select your area and click [Next].)

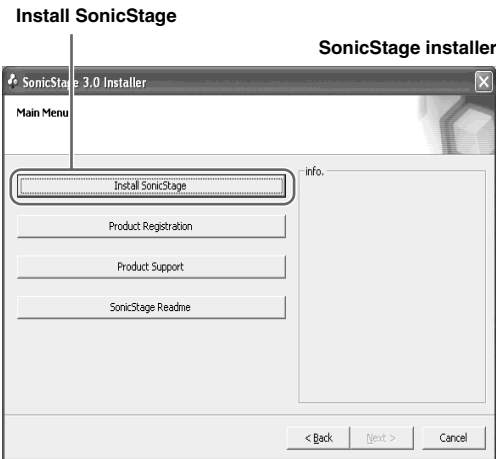

Installation may take 20 to 30 minutes depending on your computer. Restart the computer after installing is complete.

If you cannot install the software, check the Q&A shown below.

Even if the SonicStage or OpenMG Jukebox software is already installed, be sure to install the supplied SonicStage software in order to install the driver for the Network Walkman.

Q6 Is the access lamp of your computer lit?

- A6 When the access lamp of your computer is lit, the installation is progressing normally. Please wait. The installation may take 30 minutes or more, depending on your computer, CD drive or system environment.

Q7 Does the installation wizard not start up when the supplied CD-ROM is inserted?

- A7 The installation wizard may not start up, depending on your computer setting. In this case, double-click [My computer] - [CD-ROM] on your computer.

Make sure of the following to install the SonicStage software successfully.

- Quit all applications, including resident programs.
- Log on as administrator.

■ If the SonicStage software does not start up

Install the software again.

(Copy the contents of the supplied CD-ROM into your computer, then installing should finish successfully.)



Should any problem persist after you have checked these symptoms, consult your nearest Sony dealer.

Notes

- We do not guarantee trouble-free operation on all computers that satisfy the system requirement.
- The NTFS format of Windows XP/Windows 2000 Professional can be used only with the standard (factory) settings.
- We do not guarantee trouble-free operation of the system suspend, sleep, or hibernation function on all computers.

Continue to reverse side